



Part No.	Description	Qty.	Part No.	Description	Qty.	Part No.	Description	Qty.
1	Main housing	1	30	E-clip	1	59	Soft grip	1
2	Bearing	1	31	Valve seat	1	60	Plug	2
3	Gear	1	32	O-ring	1	61	Set screw	1
4	Bearing	2	33	Water flow regulator	1	62	Side handle	1
5	Front cover	1	34	Trigger	1	63	Soft grip	1
6	Bushing	1	35	Bolt	1	64	Screw nut	2
7	Rotor	1	36	Bolt	1	65	Cushion	1
8	Rotor blade	4	37	Spring	1	66	Water tube connector	1
9	Cylinder	1	38	Lever block	1	67	Bushing	2
10	Bolt	1	39	O-ring	1	68	O-ring	1
11	Rear cover	1	40	Air inlet	1	69	Screw	2
12	Bearing	1	41	Water inlet	1	70	Wrench	1
13	Dust protection cover	1	42	Seal ring	1	71	Screw	3
14	Top sleeve	1	43	Clip	1	72	Spacer	3
15	Cushion	1	44	Spacer	1	73	Water protection pad	1
16	Soft grip	1	45	Gear	1	74	Bracket	1
17	Water tubing	1	46	Bearing	1	75	Nut	3
18	Bushing	2	47	Work spindle	1	76	Air hose fitting	1
19	O-ring	2	48	Semi-round key	1	77	Set nut	2
20	Rear housing	1	49	Brass tubing	1	78	Air hose	1
21	Spacer	6	50	Fix ring	1	79	Air hose connector	1
22	Screw	4	51	Seal ring	1	80	Water hose connector	1
23	Spring	1	52	Backing pad	1	81	Water hose	1
24	Bolt	1	53	Bushing	1	82	Enclosed tubing	1
25	O-ring	1	54	O-ring	1	83	Clamp	1
26	O-ring	3	55	Water diverter	1	84	Bushing	1
27	Cushion	1	56	Front handle	1	85	O-ring	1
28	Air regulating knob	1	57	3-position lever block	1			
29	Bolt	1	58	Bolt	1			

- Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.
- When ordering spare parts and components, give each part number and order quantity.

Thank you.